

# 8.

# Menu Operation

## ADJUSTING TV SETTINGS

This section will help you in navigating the menu systems used for adjusting all TV parameters.

The On Screen Menu's are very easy to operate, simply use the ARROW keys (B) and OK key (C) on the remote control to access and adjust all options.

## MENU OPERATION/ NAVIGATION

The Menu allows you to alter your TV settings – and is used to customise picture, sound and general settings as well as giving you access to tuning and setup options.

1. Press MENU (D) to access the main menu. – see fig 1.
2. Use ARROW keys (B) up/ down to highlight the submenu you wish to enter - Video, Audio, TV, Setup and Parental submenu's – see fig 2..
3. Press the right ARROW key (B) to enter the selected submenu.
4. Use ARROW keys up/ down (B) to select a parameter e.g. "Contrast..." etc
5. Use ARROW keys left/ right to adjust the selected parameter.
6. Press the EXIT key (F) to step back to previous menu/ submenu or the MENU key (D) to return to normal viewing mode .

### KEY CONTROLS

- A – POWER KEY
- B – ARROW KEYS
- C – OK/ ENTER KEY
- D – MENU KEY
- E – SOURCE KEY
- F – EXIT KEY

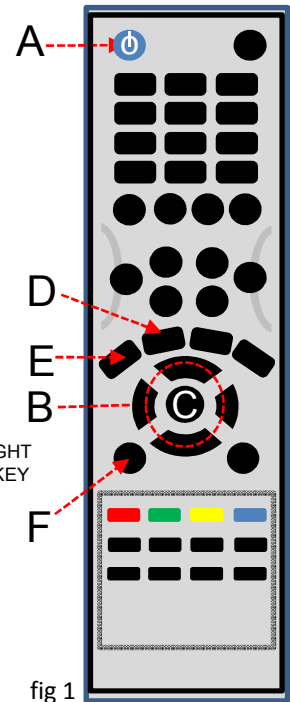
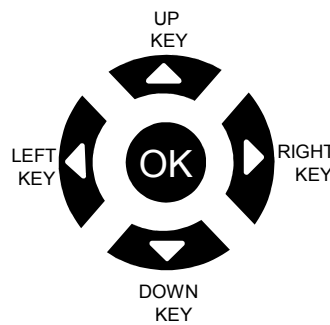


fig 1

**(Note..** Press EXIT (F) to go back a step within the Menu.)

Video (Picture Settings)		Picture Mode	User	◀▶	Indicates several Options available.
Audio (Sound Settings)		Brightness		50	
TV (Tuning Menu)		Contrast		45	Indicates a Parameter level .
Setup (General Settings)		Saturation		40	
Parental (Hotel/ Child Lock Settings)		Sharpness		50	
		Gamma	Middle	◀▶	
		Color Temperature	Standard	◀▶	Indicates access to another menu page.
		Advanced Video		▶	
Name of current menu displayed here	<b>Video</b>	ENTER Enter	◀▶▶▲ Select	EXIT Exit	

fig 2

The tables on the following pages detail the options available in the MENU. The key functions are listed with details of the parameters that can be adjusted and what they are used for.

The menu layout in this user guide may differ slightly from your TV

# Menu Operation

## PARENTAL MENU (HOTEL MODE/ CHILD LOCK)

### PARENTAL MAIN MENU

### CHILD LOCK MENU

Password default password (0000)

Channel Block	By using this parameter the user can block unwanted channels from being viewed. Use ARROW keys to select channel and confirm with OK – a padlock symbol appears in the box next to the channel indicating that it is blocked – press again to unblock. The password will be required to access these channels before viewing.
Program Block	Program Block is an Age Rating setting. This blocks the programme with age rating beyond the selected age – relies on broadcaster transmission.
Input Block	This parameter is used to block any input sources. Use the up/ down ARROW keys to select the input source(s) you wish to block and confirm with OK. A padlock in the box corresponding to the input signifies the selection. To unblock – highlight again and press OK – the padlock sign will disappear. The password will be required to access these sources before viewing.
Change Password	This feature is used to change the default password (0000) to any user defined password .
Clean All	This feature will clear all the user settings in the password menu memory.

### INPUT BLOCK MENU

### HOTEL MODE MENU

Hotel Mode (Default password 0000)

Hotel Mode	On/Off	Hotel Mode is used to block/ limit certain TV functions - HOTEL MODE must be "ON " to enable the selections below.
Change Password		This feature is used to change the default password (0000) to any user defined password .
OSD Display Disable	On/ Off	OSD display cannot be displayed, with this parameter active, user cannot enter direct channel number.
Menu Disable	On/ Off	OSD menu is locked with this parameter, user needs to enter password to access OSD menu.
Disable Search	On/ Off	This parameter is used to block TV menu and specifically the tuning mode.
Key Lock	On/ Off	This parameter is used to lock the functionality of key controls on the TV.
Max Vol	0 to 100	This parameter is used to set a maximum volume level on sound output.
Power On Vol	0 to 100	This parameter is used to set the desired volume output when the TV is switched on from standby. NOTE: Volume level for Power On Vol can be set up to the limit of Max Vol parameter only.
Source		This parameter is used to set the Input Source selected when the TV is turned on from standby.
Program NO.		This is used to set the Channel displayed when the TV is turned on from standby.

### CHANGE PASSWORD MENU